


BM2 24H 4Z/GP Operating Instructions

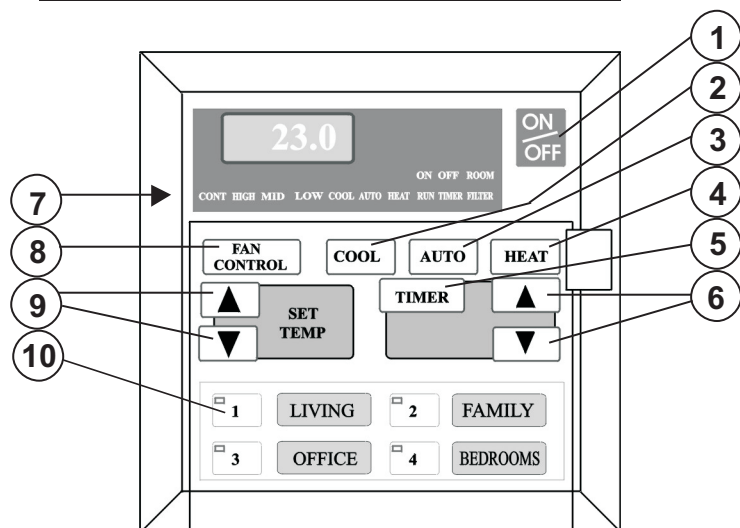

- 1 Press **ON/OFF** to START or STOP the Air Conditioner
- 2 Press **COOL** to select COOLING ONLY operation
- 3 Press **AUTO** to select AUTO operating mode.
The system automatically selects HEATING or COOLING on demand
- 4 Press **HEAT** to select HEATING ONLY operation
- 5 Press **TIMER** to activate the COUNTDOWN TIMER
If the system is ON, it turns OFF after the set period (e.g. sleep timer)
If the system is OFF, it turns ON after the set period (adjust 30 min - 24 Hr)
- 6 After pressing **TIMER** (while the **TIMER** light is flashing)
Press **TIMER** ▲ or ▼ to adjust the TIMER duration
- 7 Mode lights indicate the system operating status
e.g. "RUN" light indicates the compressor is running.

- 8 Keep pressing **FAN CONTROL** to cycle through the fan speeds
HIGH, MID, LOW, CONT HIGH, CONT MID, CONT LOW - *CONT is Continuous*
"CONTINUOUS" air circulation is usually used in COOLING.
- 9 Press **SET TEMP** ▲ or ▼ to adjust the SET POINT
to the room temperature you desire *usually ~ 22.5*
- 10 Zone selection (option) allows comfort control of specific areas
The zone lights indicate the active areas in the house, one zone always remains on.
Zone selection increases the efficiency of your Air Conditioner and saves energy

LOCK THE SET POINT RANGE to resist tampering Press **ON/OFF** to turn off the system

UPPER LIMIT - Press **TIMER** ▲ then **SET TEMP** ▲ (default is 28)
Press **SET TEMP** ▲ or ▼ **While it is flashing**, to set the limits.

LOWER LIMIT - Press **TIMER** ▼ then **SET TEMP** ▼ (default is 16)
Press **SET TEMP** ▲ or ▼ **While it is flashing**, to set the limits.

FILTER LIGHT FLASHING

This is a warning after 160 hours of running time, to remind you to check the RETURN AIR FILTER to see if it needs a clean. To reset : Press **ON/OFF**

DISPLAY ROOM TEMPERATURE

"Quick Press" **TIMER** ▲ to check the room temperature ("ROOM" light flashes)
The room temperature is displayed for 3 seconds, then the display reverts back to set point

VENTILATION MODE

With the system off, Press **FAN CONTROL** to circulate the air. Press **ON/OFF** to stop fan

BM2-24H-4Z



BM2-24H-GP



INSTALLER:	COMPANY:	TELEPHONE:
------------	----------	------------



Operating Instructions



Models BM2-24H-4Z/GP

Congratulations on your purchase of a quality air conditioning control system. Please read the following pages carefully for complete and satisfactory control of your air conditioning system. Additional technical details are available in the Installation Instructions.



For Technical Enquiries
Free Call 1300 135 735

