



Operating Instructions

LE75 TEMPERATURE CONTROLLER

A quality Leasam Air Conditioning Control System.
Additional technical details are available in the Installation Instructions.

Technical Support - Free Call 1300 135 735

INSTALLER:
COMPANY:
TELEPHONE:
EMAIL:




LE75




LE75V



LE75

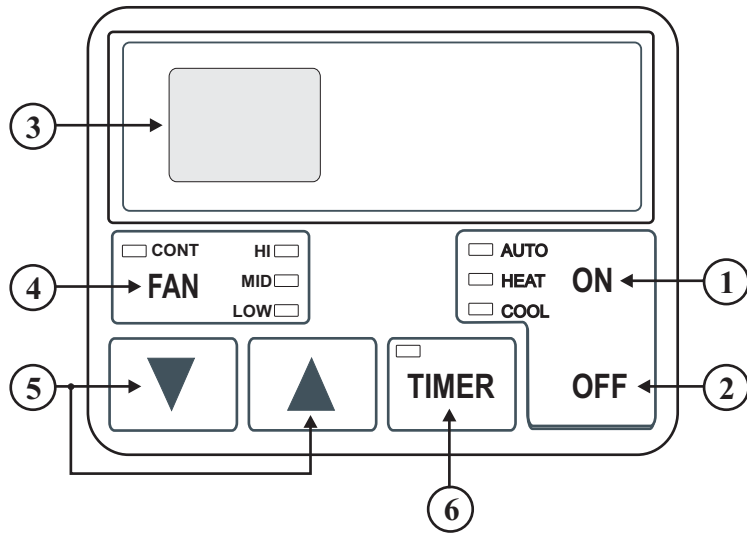

LE75V

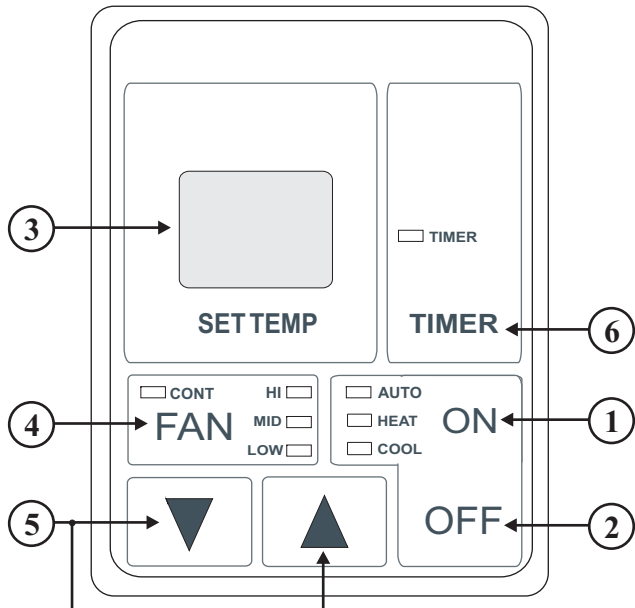

LE75 OPERATING INSTRUCTIONS

- ① Press the ON button to start the air conditioning system
 AUTO mode will automatically select heat or cool depending on temperature.
 Press ON again to select HEAT, the system will operate in heat mode only.
 Press ON again to select COOL, the system will operate in cool mode only.
 Press ON again to go back to AUTO thermostat mode.
- ② Press OFF button to stop the air conditioning system.
- ③ Display temperature SETPOINT i.e. desired temperature setting.
- ④ Press FAN button to select fan speed, keep pressing FAN to cycle through fan settings i.e. HIGH, MID, LOW, CONT HIGH, CONT MID, CONT LOW.
 CONT stands for continuous operation of the fan, usually used in cooling mode.
- ⑤ Press and hold UP or DOWN arrow to select the desired temperature setting
- ⑥ Press the TIMER button to activate the delay timer.
e.g. before going to bed press TIMER, while it is flashing press UP or DOWN button to set 2.0 then the air conditioning system will stop after 2 hours.
If the system is ON, set TIMER to STOP the system after the set duration.
If the system is OFF, set TIMER to START the system after the set duration.

DISPLAY ROOM TEMPERATURE

"Quick Press" UP button to display the room temperature for 3 seconds.

VENTILATION MODE

With the system off, Press the FAN button to circulate the air.
 Press OFF to STOP the fan.

LED INDICATORS

MAXIMUM FAN SPEED	→	HI	RED	ORANGE	AUTO	←	AUTOMATIC MODE
MEDIUM FAN SPEED	→	MID	ORANGE	RED	HEAT	←	HEATING OPERATION
MINIMUM FAN SPEED	→	LOW	GREEN	GREEN	COOL	←	COOLING OPERATION
CONTINUOUS FAN	→	CONT	ORANGE	RED	TIMER	←	TIMER ACTIVATED