




B-101(SP4) COOLA-TAP BEER SYSTEMS

Temperature Controller

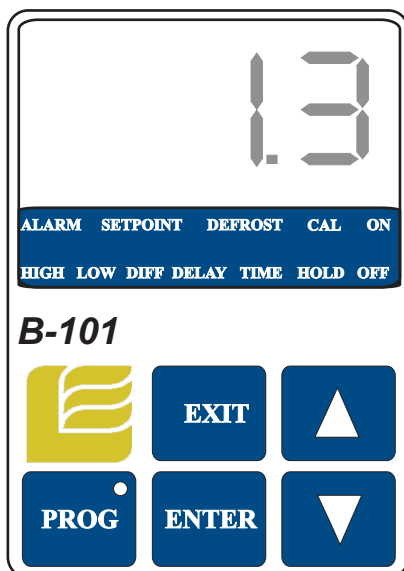


FEATURES

- EXTRA LARGE DISPLAY SCREEN
- ADJUSTABLE TEMPERATURE SET POINT AND SWITCHING DIFFERENTIALS
- SENSOR CALIBRATION
- HIGH/LOW TEMPERATURE ALARM WITH DELAY
- ALL PARAMETERS MENU ADJUSTABLE



Proudly Australian Made



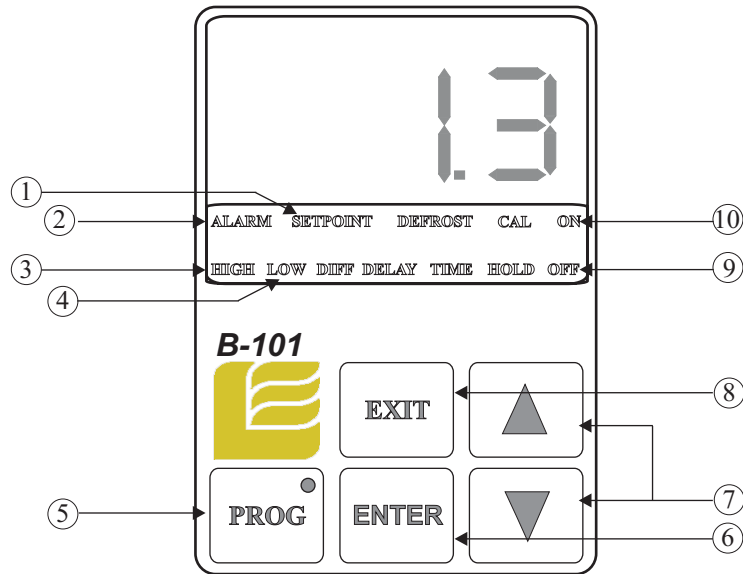

	PAGE No
1. SET POINT	1
2. ALARMS.	1
3. HIGH TEMP ALARM.	1
4. LOW TEMP ALARM	1
5. TO CHANGE OR VIEW PARAMETERS	1-4
6. TO ACCEPT PARAMETERS	1-4
7. TO ADJUST SET POINTS	1-4
8. TO RESET ALARM DELAY AND EXIT MENU	1-4
9. COMPRESSOR OFF	
10. COMPRESSOR ON	
INDEX	
TO RESET ALARM DELAY AND ADJUST SET POINT AND CLOCK	1
TO ENTER PROGRAM MENU.	2
TO RESET TO FACTORY DEFAULT SETTINGS AND CHANGE PROBE TYPES.	2
MENU TABLES	3
TO TEST OPERATION AND CHECK LED'S	4
WIRING DIAGRAMS	5

OPERATION

1. MEMORY

THE LE101 SP4 RETAINS ALL SETTINGS INTO PERMANENT MEMORY

2. HIGH AND LOW TEMP ALARMS.

THE LE101 SP4 HAS AN UPPER AND LOWER ALARM SETTING.
AN ALARM IS SIGNALLED BY THE "ALARM" LED FLASHING AND BUZZER ON KEYBOARD DISPLAY.
THE RELAY MODULE ALSO HAS 16AMP VOLT FREE CONTACTS FOR REMOTE ALARM.
THERE IS ALSO A PROGRAMABLE ALARM DELAY WHICH CAN BE SET FROM THE KEYBOARD.

2B. TO RESET ALARM DELAY

WHEN AN ALARM DELAY HAS EXPIRED THE KEYBOARD BUZZER WILL SOUND AND THE ALARM RELAY ACTIVATES.

TO RESET THE ALARM DELAY. PRESS




3. PROBE FAULT


SHOULD THE TEMPERATURE PROBE OR ASSOCIATED WIRING BECOME FAULTY THE "ALARM" LED AND KEYBOARD BUZZER WILL SOUND, THE ALARM RELAY WILL GO INTO ALARM CONDITION AN E-15 WILL BE SHOWN ON DISPLAY AND THE COMPRESSOR CALL IS SHUT DOWN.

4. TEMPERATURE SET POINT.


NB. CHILL TEMPERATURE IS THE NORMAL DISPLAY.

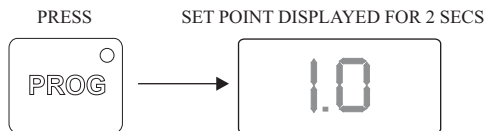


5. TO CHANGE SET POINT

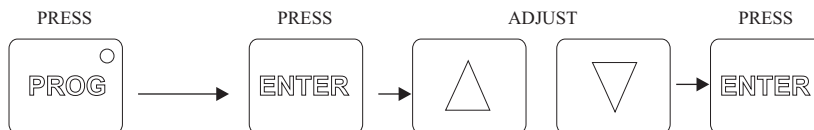

6 FACTORY DEFAULT SETTING.

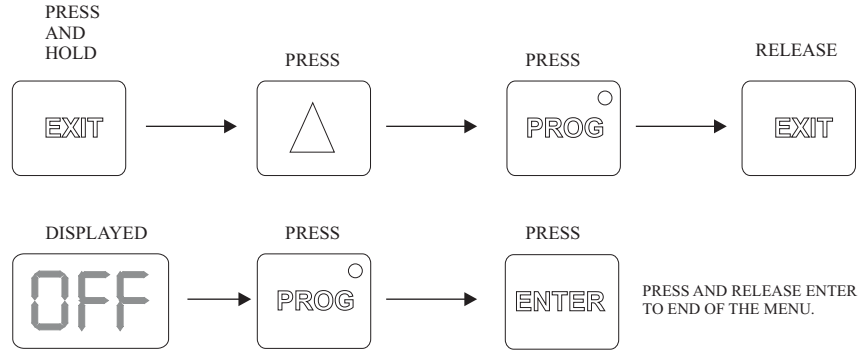

7. TO ENTER PROGRAM MENU

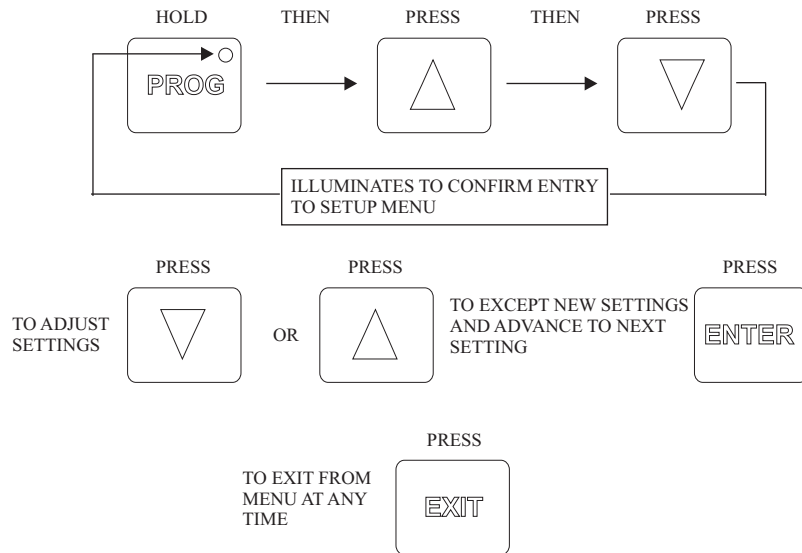

10. TEST MODES

IN TEST MODE , RELAY OUTPUTS AND REMOTE DISPLAY LED'S CAN BE CHECKED

